









|                                 |     |     |     |           |                 |           |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
|---------------------------------|-----|-----|-----|-----------|-----------------|-----------|------------|------------|------------|------------|------------|------------|------------|--------|--------|--------|--------|--------|--|--|--|--|
| Elektron Analog Heat MKII       | 215 | 184 | 63  | Elektron  | Controller      | U8463     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Analog Heat MKII       | 215 | 184 | 63  | Elektron  | Controller      | N/D       | N/D        |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Analog Rytm MKII       | 340 | 176 | 63  | Elektron  | Controller      | U8462     | U9023      | U93010     |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Analog Rytm MKII       | 340 | 176 | 63  | Elektron  | Controller      | 648029    | 028008     | 641634     |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Digitakt               | 215 | 176 | 63  | Elektron  | Controller      | U8463     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Digitakt               | 215 | 176 | 63  | Elektron  | Controller      | N/D       |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Digitone               | 215 | 176 | 63  | Elektron  | Controller      | U8463     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Digitone               | 215 | 176 | 63  | Elektron  | Controller      | N/D       |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Digitone Keys          | 868 | 185 | 90  | Elektron  | Controller      | U8306     | U93015 MK2 |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Digitone Keys          | 868 | 185 | 90  | Elektron  | Controller      | 056332    | 670256     |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Octatrack MKII         | 340 | 184 | 63  | Elektron  | Controller      | U8463     | U93010     |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Elektron Octatrack MKII         | 340 | 184 | 63  | Elektron  | Controller      | N/D       | 641634     |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Clarett+2Pre          | 210 | 161 | 55  | Focusrite | Audio Interface | U8460     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Clarett+2Pre          | 210 | 161 | 55  | Focusrite | Audio Interface | 620513    |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Clarett+4Pre          | 222 | 192 | 64  | Focusrite | Audio Interface | U8460     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Clarett+4Pre          | 222 | 192 | 64  | Focusrite | Audio Interface | 620513    |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 18I8         | 227 | 180 | 66  | Focusrite | Audio Interface | U8460     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 18I8         | 227 | 180 | 66  | Focusrite | Audio Interface | 620513    |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 2i4          | 210 | 140 | 48  | Focusrite | Audio Interface | U8460     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 2i4          | 210 | 140 | 48  | Focusrite | Audio Interface | 620513    |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 6i6          | 210 | 180 | 50  | Focusrite | Audio Interface | U8460     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 6i6          | 210 | 180 | 50  | Focusrite | Audio Interface | 620513    |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 8i6          | 210 | 150 | 48  | Focusrite | Audio Interface | U8460     |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Focusrite Scarlett 8i6          | 210 | 150 | 48  | Focusrite | Audio Interface | 620513    |            |            |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Gemini CDJ-300                  | 290 | 220 | 111 | Gemini    | Media Player    | U9018     | U9120      | U93010     |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Gemini CDJ-300                  | 290 | 220 | 111 | Gemini    | Media Player    | 028010    | 028003     | 641634     |            |            |            |            |            |        |        |        |        |        |  |  |  |  |
| Gemini CDJ-700                  | 337 | 305 | 104 | Gemini    | Media Player    | U8443 MK2 | U9017 MK2  | U9121 MK2  | U9101      | U9102      | U9107      | U91021 MK3 | U92021 MK3 | U91074 | U93011 |        |        |        |  |  |  |  |
| Gemini CDJ-700                  | 337 | 305 | 104 | Gemini    | Media Player    | N/D       | N/D        | N/D        | 028007     | 028006     | 620519     | 658177     | 656791     | 656793 | 641636 |        |        |        |  |  |  |  |
| Gemini CDM-4000BT               | 483 | 254 | 89  | Gemini    | Media Player    | U8015     | U8302      | U9103 MK2  | U92017     | U91019 MK3 | U93012     | U7101      | U7201      |        |        |        |        |        |  |  |  |  |
| Gemini CDM-4000BT               | 483 | 254 | 89  | Gemini    | Media Player    | 638370    | 029030     | N/D        | 651080     | 047874     | 641638     | 028058     | 029358     |        |        |        |        |        |  |  |  |  |
| Gemini FirstMix I/O             | 360 | 135 | 56  | Gemini    | Controller      | U9023     | U9101      | U9102      | U9880      | U93010     |            |            |            |        |        |        |        |        |  |  |  |  |
| Gemini FirstMix I/O             | 360 | 135 | 56  | Gemini    | Controller      | 028008    | 028007     | 028006     | 014592     | 641634     |            |            |            |        |        |        |        |        |  |  |  |  |
| Gemini FirstMix Pro             | 370 | 230 | 61  | Gemini    | Controller      | U9023     | U9101      | U9102      | U9108      | U9880      | U93010     |            |            |        |        |        |        |        |  |  |  |  |
| Gemini FirstMix Pro             | 370 | 230 | 61  | Gemini    | Controller      | 028008    | 028007     | 028006     | 622487     | 014592     | 641634     |            |            |        |        |        |        |        |  |  |  |  |
| Gemini G4V DJ                   | 534 | 320 | 45  | Gemini    | Controller      | U8015     | U9013 MK2  | U9103 MK2  | U91019 MK3 | U92019     | U91059     | U92059     | U93012     | U7001  | U7101  | U7201  |        |        |  |  |  |  |
| Gemini G4V DJ                   | 534 | 320 | 45  | Gemini    | Controller      | 638370    | N/D        | N/D        | 047874     | N/D        | 620498     | N/D        | 641638     | 028060 | 028058 | 029358 |        |        |  |  |  |  |
| Gemini GMX                      | 514 | 278 | 40  | Gemini    | Controller      | U8015     | U9103 MK2  | U93012     | U7001      | U7101      | U7201      |            |            |        |        |        |        |        |  |  |  |  |
| Gemini GMX                      | 514 | 278 | 40  | Gemini    | Controller      | 638370    | N/D        | 641638     | 028060     | 028058     | 029358     |            |            |        |        |        |        |        |  |  |  |  |
| Gemini MDJ-1000                 | 337 | 305 | 104 | Gemini    | Media Player    | U8443 MK2 | U9017 MK2  | U9121 MK2  | U9107      | U91021 MK3 | U92021 MK3 | U93011     |            |        |        |        |        |        |  |  |  |  |
| Gemini MDJ-1000                 | 337 | 305 | 104 | Gemini    | Media Player    | N/D       | N/D        | N/D        | 620519     | 658177     | 656791     | 641636     |            |        |        |        |        |        |  |  |  |  |
| Gemini Slate2                   | 389 | 225 | 47  | Gemini    | Controller      | U8007     | U8301      | U9023      | U9101      | U9102      | U9108      | U93011     |            |        |        |        |        |        |  |  |  |  |
| Gemini Slate2                   | 389 | 225 | 47  | Gemini    | Controller      | N/D       | 029029     | 028008     | 028007     | 028006     | 622487     | 641636     |            |        |        |        |        |        |  |  |  |  |
| Gemini Slate4                   | 381 | 255 | 25  | Gemini    | Controller      | U8007     | U9023      | U9101      | U9102      | U9108      | U93011     |            |            |        |        |        |        |        |  |  |  |  |
| Gemini Slate4                   | 381 | 255 | 25  | Gemini    | Controller      | N/D       | 028008     | 028007     | 028006     | 622487     | 641636     |            |            |        |        |        |        |        |  |  |  |  |
| Gemini TT-4000                  | 428 | 349 | 90  | Gemini    | Turntable       | U8308     | U91029 MK2 | U91030 MK2 | U92030     | U91028     | U91048     | U92068     | U91050     | U92050 | U93016 |        |        |        |  |  |  |  |
| Gemini TT-4000                  | 428 | 349 | 90  | Gemini    | Turntable       | 620523    | 047884     | 047885     | 665092     | N/D        | N/D        | N/D        | 665091     | N/D    | 641644 |        |        |        |  |  |  |  |
| Hercules DJConsole 4-Mx         | 400 | 250 | 19  | Hercules  | Controller      | U8007     | U9023      | U9101      | U9102      | U9108      | U9490      | U91019 MK3 | U92019     | U91059 | U92059 | U93011 | U7001  | U7101  |  |  |  |  |
| Hercules DJConsole 4-Mx         | 400 | 250 | 19  | Hercules  | Controller      | N/D       | 028008     | 028007     | 028006     | 622487     | 027993     | 047874     | N/D        | 620498 | N/D    | 641636 | 028060 | 028058 |  |  |  |  |
| Hercules DJConsole RMX 2        | 447 | 307 | 127 | Hercules  | Controller      | U9022     | U9103 MK2  | U93011     | U7001      | U7101      | U7201      |            |            |        |        |        |        |        |  |  |  |  |
| Hercules DJConsole RMX 2        | 447 | 307 | 127 | Hercules  | Controller      | 028009    | N/D        | 641636     | 028060     | 028058     | 029358     |            |            |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Air S Series | 350 | 220 | 30  | Hercules  | Controller      | U8301     | U9023      | U9101      | U9102      | U9108      | U9490      | U9880      | U93011     |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Air S Series | 350 | 220 | 30  | Hercules  | Controller      | 029029    | 028008     | 028007     | 028006     | 622487     | 027993     | 014592     | 641636     |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Air+ S       | 455 | 260 | 80  | Hercules  | Controller      | U8007     | U9012      | U9013 MK2  | U9022      | U9103 MK2  | U93011     | U7001      | U7101      |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Air+ S       | 455 | 260 | 80  | Hercules  | Controller      | N/D       | 028013     | N/D        | 028009     | N/D        | 641636     | 028060     | 028058     |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Impulse 200  | 320 | 195 | 49  | Hercules  | Controller      | U9022     | U9013      | U9101      | U9102      | U9108      | U9470      | U9490      | U9880      | U93010 |        |        |        |        |  |  |  |  |
| Hercules DJControl Impulse 200  | 320 | 195 | 49  | Hercules  | Controller      | 028009    | 028008     | 028007     | 028006     | 622487     | 027994     | 027993     | 014592     | 641634 |        |        |        |        |  |  |  |  |
| Hercules DJControl Impulse 300  | 480 | 268 | 52  | Hercules  | Controller      | U8007     | U8015      | U9012      | U9013 MK2  | U9103 MK2  | U91019 MK3 | U92019     | U91059     | U92059 | U93012 | U7001  | U7101  |        |  |  |  |  |
| Hercules DJControl Impulse 300  | 480 | 268 | 52  | Hercules  | Controller      | N/D       | 638370     | 028013     | N/D        | N/D        | 047874     | N/D        | 620498     | N/D    | 641638 | 028060 | 028058 |        |  |  |  |  |
| Hercules DJControl Impulse 500  | 542 | 296 | 70  | Hercules  | Controller      | U8015     | U8302      | U8309      | U9103 MK2  | U91019 MK3 | U93013     | U7002      | U7102      | U7201  |        |        |        |        |  |  |  |  |
| Hercules DJControl Impulse 500  | 542 | 296 | 70  | Hercules  | Controller      | 638370    | 029030     | 637218     | N/D        | 047874     | 641640     | 028059     | 028057     | 029358 |        |        |        |        |  |  |  |  |
| Hercules DJControl Instinct     | 265 | 187 | 80  | Hercules  | Controller      | U9023     | U9101      | U9102      | U9490      | U9880      | U93010     |            |            |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Instinct     | 265 | 187 | 80  | Hercules  | Controller      | 028008    | 028007     | 028006     | 027993     | 014592     | 641634     |            |            |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Jogvision    | 455 | 254 | 85  | Hercules  | Controller      | U8007     | U9012      | U9013 MK2  | U9022      | U9103 MK2  | U93011     | U7001      | U7101      |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Jogvision    | 455 | 254 | 85  | Hercules  | Controller      | N/D       | 028013     | N/D        | 028009     | N/D        | 641636     | 028060     | 028058     |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Starlight    | 340 | 100 | 49  | Hercules  | Controller      | U9022     | U9023      | U9101      | U9102      | U9108      | U9470      | U9880      | U93010     |        |        |        |        |        |  |  |  |  |
| Hercules DJControl Starlight    | 340 | 100 | 49  | Hercules  | Controller      | 028009    | 028008     | 028007     | 028006     | 622487     | 027994     | 027993     | 014592     | 641634 |        |        |        |        |  |  |  |  |
| Hercules DJControl Wave         | 400 | 291 | 45  | Hercules  | Controller      | U8007     | U8301      | U9023      | U9101      | U9102      | U9108      | U9490      | U9880      | U93011 | U7001  | U7101  | U7201  |        |  |  |  |  |
| Hercules DJControl Wave         | 400 | 291 | 45  | Hercules  | Controller      | N/D       | 029029     | 028008     | 028007     | 028006     | 622487     | 027993     | 014592     | 641636 | 028060 | 028058 | 029358 |        |  |  |  |  |
| Hercules P32 DJ Controller      | 355 | 238 | 48  | Hercules  | Controller      | U9023     | U9101      | U9102      | U9108      | U9490      | U9880      | U93010     |            |        |        |        |        |        |  |  |  |  |
| Hercules P32 DJ Controller      | 355 | 238 | 48  | Hercules  | Controller      | 028008    | 028007     | 028006     | 622487     | 027993     | 014592     | 641634     |            |        |        |        |        |        |  |  |  |  |
| Hercules Universal DJ           | 400 | 230 | 45  | Hercules  | Controller      | U9023     | U9101      | U9102      | U9108      | U9490      | U9880      | U93011     | U7001      | U7101  | U7201  |        |        |        |  |  |  |  |

















|                                   |     |     |     |         |                 |            |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
|-----------------------------------|-----|-----|-----|---------|-----------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|------------|--------|--------|--------|--------|--------|--------|-----|--------|
| Pioneer DJM-S9                    | 407 | 267 | 108 | Pioneer | Mixer           | N/D        | N/D        | 056326     | N/D        | N/D        | 620519     | 622487     | 658177     | 656791     | N/D        | N/D    | N/D    | N/D    | N/D    | N/D    | 665091 | N/D | 641636 |
| Pioneer DJM-T1                    | 403 | 265 | 108 | Pioneer | Mixer           | U8007      | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U91021 MK3 | U92021 MK3 | U93011     |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-T1                    | 403 | 265 | 108 | Pioneer | Mixer           | N/D        | N/D        | N/D        | N/D        | 620519     | 622487     | 658177     | 656791     | 641636     |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-TOUR1                 | 445 | 452 | 179 | Pioneer | Mixer           | U91035 MK2 | U92035     |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-TOUR1                 | 445 | 452 | 179 | Pioneer | Mixer           | N/D        | N/D        |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-V10                   | 467 | 438 | 108 | Pioneer | Mixer           | U91073     | U93012     |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-V10                   | 467 | 438 | 108 | Pioneer | Mixer           | 656792     | 641638     |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-V10-LF                | 467 | 438 | 108 | Pioneer | Mixer           | U91073     | U93012     |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJM-V10-LF                | 467 | 438 | 108 | Pioneer | Mixer           | 656792     | 641638     |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJS-1000                  | 422 | 320 | 110 | Pioneer | Sampler         | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9022      | U9107      | U91021 MK3 | U92021 MK3 | U93011     |            |            |        |        |        |        |        |        |     |        |
| Pioneer DJS-1000                  | 422 | 320 | 110 | Pioneer | Sampler         | N/D        | N/D        | N/D        | 028009     | 620519     | 658177     | 656791     | 641636     |            |            |        |        |        |        |        |        |     |        |
| Pioneer DVJ-1000                  | 408 | 320 | 109 | Pioneer | Media Player    | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U91021 MK3 | U92021 MK3 | U93011     |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer DVJ-1000                  | 408 | 320 | 109 | Pioneer | Media Player    | N/D        | N/D        | N/D        | 620519     | 658177     | 656791     | 641636     |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer PLX-1000                  | 453 | 353 | 159 | Pioneer | Turntable       | U8308      | U91029 MK2 | U92029     | U91030 MK2 | U92030     | U91028     | U92028     | U91048     | U92048     | U91068     | U92068 | U91050 | U92050 | U93016 |        |        |     |        |
| Pioneer PLX-1000                  | 453 | 353 | 159 | Pioneer | Turntable       | 620523     | 047884     | 624034     | 047885     | 665092     | N/D        | N/D        | N/D        | N/D        | N/D        | N/D    | 665091 | N/D    | 641644 |        |        |     |        |
| Pioneer Rekordbox DVS Interface 2 | 141 | 128 | 33  | Pioneer | Audio Interface | U8456      |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer Rekordbox DVS Interface 2 | 141 | 128 | 33  | Pioneer | Audio Interface | 648028     |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer RMX-1000                  | 334 | 157 | 57  | Pioneer | Controller      | U8421      |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer RMX-1000                  | 334 | 157 | 57  | Pioneer | Controller      | 029032     |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer RMX-500                   | 306 | 132 | 67  | Pioneer | Controller      | U8422      |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer RMX-500                   | 306 | 132 | 67  | Pioneer | Controller      | 029033     |            |            |            |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer ToraiZ SP-16              | 437 | 261 | 75  | Pioneer | Controller      | U8007      | U8301      | U8450      | U9022      | U9103 MK2  | U93011     | U7001      | U7101      | U7201      |            |        |        |        |        |        |        |     |        |
| Pioneer ToraiZ SP-16              | 437 | 261 | 75  | Pioneer | Controller      | N/D        | 029029     | 056324     | 028009     | N/D        | 641636     | 028060     | 028058     | 029358     |            |        |        |        |        |        |        |     |        |
| Pioneer ToraiZ Squid              | 375 | 224 | 72  | Pioneer | Sequencer       | U8007      | U8462      | U9013 MK2  | U9101      | U9102      | U9108      | U9490      | U9880      | U93010     |            |        |        |        |        |        |        |     |        |
| Pioneer ToraiZ Squid              | 375 | 224 | 72  | Pioneer | Sequencer       | N/D        | 648029     | N/D        | 028007     | 028006     | 622487     | 027993     | 014592     | 641634     |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-1000/ MK2             | 383 | 305 | 110 | Pioneer | CD Player       | U8007      | U8443 MK2  | U8447      | U9017 MK2  | U9121 MK2  | U9107      | U9880      | U91021 MK3 | U92021 MK3 | U93011     |        |        |        |        |        |        |     |        |
| Pioneer XDJ-1000/ MK2             | 383 | 305 | 110 | Pioneer | CD Player       | N/D        | N/D        | 056327     | N/D        | N/D        | 620519     | 014592     | 658177     | 656791     | 641636     |        |        |        |        |        |        |     |        |
| Pioneer XDJ-700                   | 308 | 238 | 106 | Pioneer | CD Player       | U8446      | U91021 MK3 | U92021 MK3 | U91066     | U92066     | U93010     |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-700                   | 308 | 238 | 106 | Pioneer | CD Player       | 056329     | 658177     | 656791     | 637228     | N/D        | 641634     |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-AERO                  | 623 | 289 | 65  | Pioneer | Controller      | U9104 MK2  | U91014 MK3 | U92014     | U91054     | U92054     | U93013     | U7002      | U7102      | U7202      |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-AERO                  | 623 | 289 | 65  | Pioneer | Controller      | N/D        | 047868     | N/D        | 620458     | N/D        | 641640     | 028059     | 028057     | 029348     |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-R1                    | 623 | 308 | 108 | Pioneer | Controller      | U8303      | U9104 MK2  | U91014 MK3 | U92014     | U91054     | U92054     | U93013     | U7002      | U7102      | U7202      |        |        |        |        |        |        |     |        |
| Pioneer XDJ-R1                    | 623 | 308 | 108 | Pioneer | Controller      | 029031     | N/D        | 047868     | N/D        | 620458     | N/D        | 641640     | 028059     | 028057     | 029348     |        |        |        |        |        |        |     |        |
| Pioneer XDJ-RR                    | 625 | 389 | 74  | Pioneer | Controller      | U8303      | U9104 MK2  | U91065     | U92065     | U91014 MK3 | U92014     | U91054     | U92054     | U93013     | U7002      | U7102  | U7202  |        |        |        |        |     |        |
| Pioneer XDJ-RR                    | 625 | 389 | 74  | Pioneer | Controller      | 029031     | N/D        | 637303     | N/D        | 047868     | N/D        | 620458     | N/D        | 641640     | 028059     | 028057 | 029348 |        |        |        |        |     |        |
| Pioneer XDJ-RX                    | 728 | 412 | 104 | Pioneer | Controller      | U8305      | U91014 MK3 | U91015     | U92015     | U91051     | U92051     | U92014     | U91054     | U92054     | U93014 MK2 | U7003  | U7103  | U7203  |        |        |        |     |        |
| Pioneer XDJ-RX                    | 728 | 412 | 104 | Pioneer | Controller      | 056334     | 047868     | N/D        | N/D        | N/D        | N/D        | N/D        | 620458     | N/D        | 665604     | 029062 | 029064 | 641632 |        |        |        |     |        |
| Pioneer XDJ-RX2                   | 728 | 444 | 108 | Pioneer | Controller      | U8305      | U91015     | U92015     | U91051     | U92051     | U93014 MK2 | U7003      | U7103      | U7203      |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-RX2                   | 728 | 444 | 108 | Pioneer | Controller      | 056334     | N/D        | N/D        | N/D        | N/D        | 665604     | 029062     | 029064     | 641632     |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-RX3                   | 728 | 470 | 118 | Pioneer | Controller      | U8315      | U8304      | U91070     | U92070     | U93015 MK2 | U7103      | U7203      | U91075     | U91076     |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-RX3                   | 728 | 470 | 118 | Pioneer | Controller      | 665599     | 028039     | 647140     | N/D        | 670256     | 029064     | 641632     | 665602     | 665603     |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-XZ                    | 878 | 466 | 118 | Pioneer | Controller      | U91070     | U92070     | U93015 MK2 | U7003      | U7103      |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Pioneer XDJ-XZ                    | 878 | 466 | 118 | Pioneer | Controller      | 647140     | N/D        | 670256     | 029062     | 029064     |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Rane Empath                       | 356 | 254 | 100 | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U9880      | U91021 MK3 | U92021 MK3 | U93010     |            |        |        |        |        |        |        |     |        |
| Rane Empath                       | 356 | 254 | 100 | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 622487     | 014592     | 658177     | 656791     | 641634     |            |        |        |        |        |        |        |     |        |
| Rane Four                         | 782 | 106 | 403 | Rane    | Controller      | U91083     | U91082     | U93014 MK2 | U7103      | U8304      | U8321      | U91070     | U93014     |            |            |        |        |        |        |        |        |     |        |
| Rane Four                         | 782 | 106 | 403 | Rane    | Controller      | 678983     | 678982     | 665604     | 029064     | 028039     | 678979     | 647140     | 641642     |            |            |        |        |        |        |        |        |     |        |
| Rane MP 2014 Mixer                | 355 | 279 | 83  | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U9880      | U91021 MK3 | U92021 MK3 | U93010     |            |        |        |        |        |        |        |     |        |
| Rane MP 2014 Mixer                | 355 | 279 | 83  | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 622487     | 014592     | 658177     | 656791     | 641634     |            |        |        |        |        |        |        |     |        |
| Rane MP2015                       | 335 | 333 | 83  | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9880      | U91021 MK3 | U92021 MK3 | U91074     | U93011     |            |        |        |        |        |        |        |     |        |
| Rane MP2015                       | 335 | 333 | 83  | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 014592     | 658177     | 656791     | 641636     |            |            |        |        |        |        |        |        |     |        |
| Rane One                          | 674 | 345 | 124 | Rane    | Controller      | U8313      | U9104 MK2  | U7202      | U93014 MK2 |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Rane One                          | 674 | 345 | 124 | Rane    | Controller      | 656788     | N/D        | 029348     | 665604     |            |            |            |            |            |            |        |        |        |        |        |        |     |        |
| Rane Seventy/ A Trak              | 445 | 285 | 105 | Rane    | Mixer           | U8007      | U8474      | U9017 MK2  | U9121 MK2  | U9022      | U9022      | U9121 MK2  | U91048     | U92048     | U91058     | U92058 | U91068 | U92068 | U91050 | U92050 | U93011 |     |        |
| Rane Seventy/ A Trak              | 445 | 285 | 105 | Rane    | Mixer           | N/D        | 637223     | N/D        | N/D        | 028009     | 028009     | N/D        | N/D        | N/D        | N/D        | N/D    | N/D    | N/D    | 665091 | N/D    | 641636 |     |        |
| Rane Seventy-Two                  | 445 | 285 | 105 | Rane    | Mixer           | U8007      | U8474      | U9017 MK2  | U9121 MK2  | U9022      | U9022      | U9121 MK2  | U91048     | U92048     | U91058     | U92058 | U91068 | U92068 | U91050 | U92050 | U93011 |     |        |
| Rane Seventy-Two                  | 445 | 285 | 105 | Rane    | Mixer           | N/D        | 637223     | N/D        | N/D        | 028009     | 028009     | N/D        | N/D        | N/D        | N/D        | N/D    | N/D    | N/D    | 665091 | N/D    | 641636 |     |        |
| Rane Seventy-Two MKII             | 445 | 285 | 105 | Rane    | Mixer           | U8007      | U8474      | U9017 MK2  | U9121 MK2  | U9022      | U9022      | U9121 MK2  | U91048     | U92048     | U91058     | U92058 | U91068 | U92068 | U91050 | U92050 | U93011 |     |        |
| Rane Seventy-Two MKII             | 445 | 285 | 105 | Rane    | Mixer           | N/D        | 637223     | N/D        | N/D        | 028009     | 028009     | N/D        | N/D        | N/D        | N/D        | N/D    | N/D    | N/D    | 665091 | N/D    | 641636 |     |        |
| Rane Sixty Eight                  | 364 | 320 | 112 | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9880      | U91021 MK3 | U92021 MK3 | U91074     | U93011     |            |        |        |        |        |        |        |     |        |
| Rane Sixty Eight                  | 364 | 320 | 112 | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 014592     | 658177     | 656791     | 656793     | 641636     |            |        |        |        |        |        |        |     |        |
| Rane Sixty Four                   | 364 | 305 | 102 | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9880      | U91021 MK3 | U92021 MK3 | U91074     | U93011     |            |        |        |        |        |        |        |     |        |
| Rane Sixty Four                   | 364 | 305 | 102 | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 014592     | 658177     | 656791     | 656793     | 641636     |            |        |        |        |        |        |        |     |        |
| Rane Sixty One                    | 338 | 254 | 102 | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U9880      | U91021 MK3 | U92021 MK3 | U93010     |            |        |        |        |        |        |        |     |        |
| Rane Sixty One                    | 338 | 254 | 102 | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 622487     | 014592     | 658177     | 656791     | 641634     |            |        |        |        |        |        |        |     |        |
| Rane Sixty Two/Two Z              | 362 | 267 | 102 | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U9880      | U91021 MK3 | U92021 MK3 | U91074     | U93010     |        |        |        |        |        |        |     |        |
| Rane Sixty Two/Two Z              | 362 | 267 | 102 | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 622487     | 014592     | 658177     | 656791     | 656793     | 641634     |        |        |        |        |        |        |     |        |
| Rane TTM 56S                      | 338 | 254 | 80  | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U9880      | U91021 MK3 | U92021 MK3 | U93010     |            |        |        |        |        |        |        |     |        |
| Rane TTM 56S                      | 338 | 254 | 80  | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 622487     | 014592     | 658177     | 656791     | 641634     |            |        |        |        |        |        |        |     |        |
| Rane TTM 57 MKII                  | 356 | 254 | 102 | Rane    | Mixer           | U8443 MK2  | U9017 MK2  | U9121 MK2  | U9107      | U9108      | U9880      | U91021 MK3 | U92021 MK3 | U93010     |            |        |        |        |        |        |        |     |        |
| Rane TTM 57 MKII                  | 356 | 254 | 102 | Rane    | Mixer           | N/D        | N/D        | N/D        | 620519     | 622487     | 014592     |            |            |            |            |        |        |        |        |        |        |     |        |











